



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
CH LIST	-/--
TV DISPLAY	
MTS / SAP	
DTV STRENGTH	
HDMI	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RECALL	BACK
SLEEP	SLEEP
TV	TV/DTV
VGA	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AV	SHIFT+ / AV
---	SHIFT+ -/--
P. M.	SHIFT+
YPbPr	SHIFT+
P. G.	SHIFT+
S. M.	SHIFT+
EPG / PAGE UP	SHIFT+UP
EPG / PAGE DOWN	SHIFT+DOWN
CC	SHIFT+BACK

