



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / SLEEP	0
USB	AV
FIND	-/--
MOVIE	
SUBT.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV / SAT	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / V. FMT.	RED
GREEN / ZOOM	GREEN
YELLOW / M/P	YELLOW
BLUE / TIMER	BLUE
AUDIO	SHIFT+MUTE
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
P-	SHIFT+DOWN
P+	SHIFT+UP
	SHIFT+LEFT
	SHIFT+RIGHT
TV / RAD.	SHIFT+ TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

