



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
S.PAGE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
R.LIST	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO	 / NET TV
HOLD	 / SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
MEDIA	SHIFT+6
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
P.MODE	SHIFT+ 
S.TITLE	SHIFT+ 
FAV+	SHIFT+ VOL+
FAV -	SHIFT+ VOL -
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
RADIO	SHIFT+TV/DTV
S.MODE	SHIFT+FAV
STOP	SHIFT+ 
RECORD	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

