



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
CH LIST	-/--
ECO	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
LANG	SHIFT+MUTE
USB	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
ZOOM+	SHIFT+UP
ZOOM -	SHIFT+DOWN
PRE - CH	SHIFT+BACK
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

