



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DTV MENU	MENU
EXIT / I/II	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	[Icon] / SOURCE
QV	-/--
[Icon] / DISPLAY	[Icon]
[Icon] / SIZE	[Icon]
[Icon] / MIX	[Icon]
TEXT	[Icon]
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
[Icon] / CANCEL	BACK
[Icon] / SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
ATV MENU	FAV
[Icon] / HOLD	[Icon] / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
→ S ← / SOUND	SHIFT+MUTE
SOURCE	SHIFT+[Icon]
[Icon] / REVEAL	SHIFT+[Icon]
→ P ← / PICTURE	SHIFT+[Icon]
[Icon] / SUBPG.	SHIFT+[Icon]
SUBTL.	SHIFT+[Icon]
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
TV	SHIFT+ TV/DTV
[Icon] / INDEX	SHIFT+INFO
VGA	SHIFT+FAV

