



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
→ / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
→ / SOURCE	→ / SOURCE
-/--	-/--
PVR	□
↔ / ASPECT	□
INDEX	□
TTX	□
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
↺↻	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO	▲ / NET TV
FREEZE	⏸ / SMART TUBE
HOLD	■ / SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
NICAM / A2	SHIFT+MENU
REVEAL	SHIFT+ □
SIZE	SHIFT+ □
S. PAGE	SHIFT+ □
SUBTITLE	SHIFT+ □
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
T. SHIFT	SHIFT+SLEEP
S. MODE	SHIFT+TV/DTV
P. MODE	SHIFT+EPG
STOP	SHIFT+ ■
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

