



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CANC	BACK
DVI	TV/DTV
INFO	INFO
TITLE	EPG
BOOKMARK	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE	
STOP	
ANGLE	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PSM	SHIFT+1
KEYBOARD	SHIFT+2
I – SCAN	SHIFT+3
P – SCAN	SHIFT+4
P / N	SHIFT+5
SLOW	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP

