



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
LIST	-/--
ASPECT	
SETUP	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
ATV/DTV	TV/DTV
INFO/TEXT INDEX	INFO
EPG	EPG
QUICK	FAV

ORIGINAL	SUPERIOR
STILL	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
POWER OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
EXT. 1	SHIFT+1
EXT. 2	SHIFT+2
EXT. 3	SHIFT+3
HDMI 1	SHIFT+4
HDMI 2	SHIFT+5
HDMI 3	SHIFT+6
HDMI 4	SHIFT+7
PC	SHIFT+8
POWER ON	SHIFT+0
REVEAL	SHIFT+ 
HOLD	SHIFT+ 
SIZE	SHIFT+ 
AD	SHIFT+TV/DTV

