



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
⌂ / HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI / AV	📺 / SOURCE
S. SHOW	-/--
DIR.	📺
DISK	📺
COPY	📺
SUB - T	📺
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
STEP	SLEEP
DVD	TV/DTV
INFO	INFO
PSM	FAV
PAUSE	⏸

ORIGINAL	SUPERIOR
STOP	📺 / SMART
EDIT	RED
REV.	GREEN
PLAY	YELLOW
F.F.	BLUE
AUDIO	SHIFT+MUTE
MOVIE	SHIFT+1
MUSIC	SHIFT+2
PHOTO	SHIFT+3
SETUP	SHIFT+ 📺
SKIP NEXT/PG DN	SHIFT+ P+
SKIP PREV/PG UP	SHIFT+ P -

