



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
<<	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
MEDIA	-/--
DEEZER	
/ T	
VOLUME+	VOL+
VOLUME -	VOL -
CHANNEL+	P+
CHANNEL -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
<	BACK
RAKUTEN TV	TV/DTV
	EPG
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE

ORIGINAL	SUPERIOR
PRIME VIDEO	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
PLAY/PAUSE	SHIFT+YELLOW

