



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
SUB.PG	
TEXT/CC	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
USB	TV/DTV
INDEX	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MTS/II	SHIFT+MUTE
AV	SHIFT+
REVEAL	SHIFT+
P.MODE	SHIFT+
S.MODE	SHIFT+
SUB - T	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

