



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
UHF	AV
N / P	-/--
	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
	BACK
	SLEEP
	TV/DTV
i	INFO
EPG	EPG
FAV	FAV
	

[illegible]