



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ AV	/ SOURCE
	-/--
ZOOM	
V. FORMAT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
	TV/DTV
	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW /	YELLOW
BLUE /	BLUE
SAT	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+UP
	SHIFT+DOWN
	SHIFT+LEFT
	SHIFT+RIGHT
	SHIFT+OK
	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

