



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
+10	-/--
DISPLAY	
ZOOM	
FUNCTION	
EQ.	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TV / RADIO	TV/DTV
TITLE	INFO
EPG	EPG
LANGUAGE	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE / STEP	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
PRE. /TUN.	SHIFT+MENU
MEMO	SHIFT+1
GO TO	SHIFT+2
DVD / USB / DVB	SHIFT+  / AV
TFT ON/OFF	SHIFT+ -/--
VIDEO	SHIFT+ 
ANGLE	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
REPEAT	SHIFT+BACK
A-B	SHIFT+SLEEP
N / P	SHIFT+ TV/DTV
4:3 / 16:9	SHIFT+INFO
PROG.	SHIFT+EPG
R / L	SHIFT+FAV
SLOW	SHIFT+ 
RESUME	SHIFT+YELLOW

