



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
→ / GO TO	-/--
EDIT	
/ ZOOM	
/ ANGLE	
SUBT.	
	VOL+
	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
TIME SHIFT	SLEEP
TV SYS.	TV/DTV
INFO	INFO
COPY	EPG
/ SHUFFLE	FAV
SLOW	
RED	RED

ORIGINAL	SUPERIOR
GREEN / EPG	GREEN
YELLOW / TXT	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
/ MENU	SHIFT+MENU
SETUP	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ REPEAT	SHIFT+BACK
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

