



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ HOME	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BROWSERS	/ SOURCE
MENU	-/--
CONFIRM	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
RETURN	BACK
/ SLOW	SLEEP
COPY	TV/DTV
INFO	INFO
ANGLE	EPG

ORIGINAL	SUPERIOR
MUSIC	FAV
PAUSE/STEP	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
TV SYS.	SHIFT+MENU
/ ZOOM IN	SHIFT+UP
/ ZOOM OUT	SHIFT+DOWN
/ INSTANT REPLAY	SHIFT+LEFT
/ CM SKIP	SHIFT+RIGHT
SELECT	SHIFT+OK
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP

