



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
DECODER	-/--
LIVE	
ADD CLEAR	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
CHANNEL+	P+
CHANNEL -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
TIMER	SLEEP
DV CARD	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
DISC OPERATION	EPG
DUBBING	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
HDD	SHIFT+2
IS PS	SHIFT+3
P - N	SHIFT+4
GOTO	SHIFT+
ZOOM	SHIFT+
TIMESHIFT	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SLOW	SHIFT+LEFT
REPEAT A - B	SHIFT+BACK
TITLE	SHIFT+INFO
EDIT	SHIFT+EPG
ANGLE	SHIFT+FAV
TS SAVE	SHIFT+RED

