



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
ADD / CLEAR	-/--
DISPLAY	
ZOOM / T/R	
SETUP	
TELETEXT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT / RED	P+
SKIP PREV. / GREEN	P -
UP	UP
DOWN	DOWN
LEFT / REPLAY	LEFT
RIGHT / SKIP	RIGHT
SELECT	OK
RETURN / P<->P	BACK
TIMER	SLEEP
DV / USB	TV/DTV
NAVIGATION	EPG
DVD	FAV

ORIGINAL	SUPERIOR
EJECT	/ NET TV
PAUSE / STEP	
STOP	/ SMART
REC / OTR.	RED
REV. / YELLOW	GREEN
PLAY	YELLOW
FWD / BLUE	BLUE
AUDIO	SHIFT+MUTE
PIP	SHIFT+1
HDD	SHIFT+
GO TO	SHIFT+ -/--
SUBTITLE	SHIFT+
CH+	SHIFT+ P+
CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
TIME SHIFT	SHIFT+SLEEP
PS / IS	SHIFT+ TV/DTV
SLOW / SORT	SHIFT+
REC TO	SHIFT+RED
FILE PLAY	SHIFT+YELLOW

