



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
10+	-/--
DISPLAY	
ZOOM	
SUBTITLE	
TITLE / TTX	
+ / VOL+	VOL+
- / VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT / FAV -	LEFT
RIGHT / FAV+	RIGHT
ENTER	OK
RETURN	BACK
TV/RADIO	TV/DTV
DIGEST	INFO
PROG. / EPG	EPG
MODE	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REV	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+MENU
L/R	SHIFT+1
PBC	SHIFT+2
3D	SHIFT+3
GO TO	SHIFT+ -/--
ANGLE	SHIFT+ 
P/N	SHIFT+ 
LANGUAGE	SHIFT+ 
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP

