



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
10+	-/--
OSD	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
N / P	TV/DTV
P. SCAN	INFO
PROG	EPG

ORIGINAL	SUPERIOR
A – B	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
LANGUAGE	SHIFT+MUTE
3D	SHIFT+3
PBC	SHIFT+
ZOOM	SHIFT+
ANGLE	SHIFT+
RANDOM	SHIFT+
ECHO+	SHIFT+ VOL+
ECHO -	SHIFT+ VOL -
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
R / L	SHIFT+TV/DTV
TITLE	SHIFT+INFO

