



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ AV
10+	-/--
OSD	
ZOOM	
SETUP	
SUBTI	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
PROLOGIC	TV/DTV
TITLE	INFO
PROG	EPG
MARK	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE	
STOP	
REC / SEARCH	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
3D	SHIFT+3
PBC	SHIFT+
L / R	SHIFT+
ANGLE	SHIFT+
P. SCAN	SHIFT+
CH+	SHIFT+ P+
CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
P / N	SHIFT+TV/DTV

