



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
ADD / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ AV
HDD / DVD	-/--
DISPLAY / INFO	
ANGLE / WIDE	
SETUP	
TEXT	
VOLUME+	VOL+
VOLUME -	VOL -
PROGRAM+	P+
PROGRAM -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SELECT	OK
RETURN / EXIT	BACK
WATCH TV	SLEEP
TV / DVD	TV/DTV
HDMI	INFO

ORIGINAL	SUPERIOR
TITLE / GUIDE	EPG
VIDEO SOURCE	FAV
OPEN / CLOSE	
RED / PLAY MODE	RED
GREEN / REPEAT	GREEN
YELLOW / A – B	YELLOW
BLUE / ZOOM	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
SEACH MODE	SHIFT+EXIT
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P -
REC MODE	SHIFT+EPG
INSERT CHP	SHIFT+FAV
STOP	SHIFT+
RECORD / DUB	SHIFT+RED
SEARCH REW	SIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
SEARCH FWD	SHIFT+BLUE

