



FUNC. POSITION NUMBER	SUPERIOR REMOTE
POSITION 1	POWER
POSITION 21	MUTE
POSITION 10	MENU
POSITION 9	EXIT
POSITION 24	1
POSITION 25	3
POSITION 26	2
POSITION 28	4
POSITION 29	5
POSITION 30	6
POSITION 32	7
POSITION 33	8
POSITION 34	9
POSITION 36	0
POSITION 22	 / SOURCE
POSITION 11	
POSITION 27	
POSITION 18	VOL +
POSITION 20	VOL -
POSITION 19	P +
POSITION 23	P -
POSITION 13	UP
POSITION 17	DOWN
POSITION 14	LEFT
POSITION 16	RIGHT

FUNC. POSITION NUMBER	SUPERIOR REMOTE
POSITION 15	OK
POSITION 12	BACK
POSITION 7	INFO
POSITION 35	EPG
POSITION 31	FAV
POSITION 37	 / NET TV
POSITION 38	 / SMART
POSITION 39	RED
POSITION 40	GREEN
POSITION 41	YELLOW
POSITION 42	BLUE
POSITION 4	SHIFT+ 
POSITION 6	SHIFT+ 
POSITION 8	SHIFT+RED
POSITION 2	SHIFT+GREEN
POSITION 3	SHIFT+YELLOW
POSITION 5	SHIFT+BLUE

