



ORIGINAL	SUPERIOR
	POWER
	MUTE
M	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / SOURCE	 / SOURCE
-/-- / EXIT	-/--
 / 	
 / 	
	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / SELECT	OK
PP	BACK
	SLEEP
TV / DTV	TV/DTV
i / INFO	INFO
GUIDE / 	EPG
RED / 	RED

[illegible]