



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DTV / VCR	 / AV
LIST	-/--
USB	
MEDIA	
LANG	
TTX	
VOL+	VOL+
VOL-	VOL-
Ch+	P+
Ch-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMESHIFT	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

