



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT / DVD SETUP	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
SUBTITLE	
TEXT / ANGLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX / D. MENU	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO / EJECT	 / NET TV
HOLD / ZOOM	 / SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TV	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA / REC. LIST	SHIFT+ 
REVEAL / D. DISP.	SHIFT+ 
SIZE / TITLE	SHIFT+ 
LANG. / AUDIO	SHIFT+ 
SUBPAGE / GO TO	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
FAV -	SHIFT+EPG
FAV+	SHIFT+FAV
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

