



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
CH. LIST	-/--
DISPLAY	
SIZE / D. ZOOM	
SUBPAGE / D. TITLE	
TV / TXT / D. PRO	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
PICTURE	/ NET TV
HOLD	/ SMART
RED / D. SET	RED
GREEN / D. MENU	GREEN
YELLOW / D. SUB.	YELLOW
BLUE / D. LAN.	BLUE
NICAN / A2 / D. SLOW	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REC LIST	SHIFT+ -/--
REVEAL / D. GOTO	SHIFT+
ASPECT	SHIFT+
SOUND	SHIFT+
SUBTITLE	SHIFT+
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

