



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PLUGIH	-/--
TV	
TIMER	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO
EPG	EPG
★ / FAV	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
PIP	SHIFT+1
MEDIA	SHIFT+6
>	SHIFT+ P+
<	SHIFT+ P -
RADIO	SHIFT+TV/DTV
HELP	SHIFT+INFO
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

