



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ HOME	MENU
1 / ADD	1
2 / EJECT	2
3 / DELETE	3
4 / ZOOM	4
5 / GO TO	5
6 / MENU	6
7 / SETUP	7
8 / FUNC.	8
9 / TV OUT	9
0 / PREVIEW	0
URL	/ SOURCE
/ REFRESH	-/--
/ LED	
/ 16:9	
ANGLE	
Aa / SUBTITLE	
VOLUME -/+	VOL -/+
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
RETURN	BACK
/ SLEEP	SLEEP

ORIGINAL	SUPERIOR
i / INFO	INFO
/ SEARCH	EPG
/ BOOKMARK	FAV
RED	RED
GREEN / EPG	GREEN
YELLOW / TTX	YELLOW
BLUE	BLUE
/ AUDIO	SHIFT+MUTE
F1/2/3/4	SHIFT+ 1/2/3/4
NTSC / PAL	SHIFT+ 5/6
/ SHUFFLE	SHIFT+ -/--
SYNC. SUB. ◀▶	SHIFT+LEFT
SYNC. SUB. ▶▶	SHIFT+RIGHT
SKIP NEXT / PG UP	SHIFT+ P+
SKIP PREV / PG DN	SHIFT+ P -
/ REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
TITLE	SHIFT+INFO
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
RWD	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

