



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMIRX	AV
LIST	-/--
NOT USED	
V-KEY	
TIMESHIFT	
TEXT	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMER	SLEEP
TV	TV/DTV
INFO	INFO

ORIGINAL	REPLACEMENT
GUIDE EPG	EPG
PIP	SHIFT+ 
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
HELP	SHIFT+6
SUBTITLE	SHIFT+ 
ARROW LEFT	SHIFT+LEFT
ARROW RIGHT	SHIFT+RIGHT
RADIO	SHIFT+TV/DTV
SKIP NEXT CHAP	SHIFT+P+
SKIP PREV CHAP	SHIFT+P-
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
FWD	SHIFT+BLUE
PLAY	SHIFT+YELLOW

