



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / SOURCE	 / SOURCE
P.MODE	-/--
 / DISPLAY	
SIZE	
MIX	
 / TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
 / RECALL	BACK
TV/RADIO	TV/DTV
GUIDE	EPG
FREEZE	 / SMART

[illegible]