



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
ZOOM	
HDMI	
PC	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV	TV/DTV
S.MODE	INFO

ORIGINAL	SUPERIOR
P.MODE	EPG
FAV	FAV
AUTO	/ NET TV
FREEZE	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SEARCH	SHIFT+EXIT
AV	SHIFT+
FAV+	SHIFT+ VOL+
FAV -	SHIFT+ VOL -
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

