



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	/ AV
PROGRAM	-/--
TIMESHIFT	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CANC	BACK
TV / DVD	TV/DTV
INFO	INFO
TITLE	EPG

ORIGINAL	SUPERIOR
BOOKMARK	FAV
EJECT	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
HDD/DVD	SHIFT+AV
QUALITY	SHIFT+
EDIT	SHIFT+
STEP	SHIFT+LEFT
SLOW	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT A – B	SHIFT+BACK
RANDOM	SHIFT+FAV
ANGLE	SHIFT+RED
1 / ALL	SHIFT+GREEN
CMSKIP	SHIFT+YELLOW
RANDOM	SHIFT+BLU

