



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	/ SOURCE
DOLBY/DTS	-/--
ON SCREEN	
STEREO	
ANGLE	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
STATUS	INFO
TEST	EPG
MATRIX 6.1	FAV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SET MENU	SHIFT+MENU
AMP.	SHIFT+1
DVD/CD	SHIFT+2
TUNER	SHIFT+3
VCR	SHIFT+4
VIDEO	SHIFT+5
SURR+	SHIFT+ VOL+
SURR -	SHIFT+ VOL -
CH+/-	SHIFT+ P+/-
CENTER+	SHIFT+UP
CENTER -	SHIFT+DOWN
SW -	SHIFT+LEFT
SW+	SHIFT+RIGHT
SELECT	SHIFT+OK
NIGHT	SHIFT+SLEEP
CINEMA DSP – MOVIE	SHIFT+RED
CINEMA DSP – MUSIC	SHIFT+GREEN
CINEMA DSP – SPORTS	SHIFT+YELLOW
CINEMA DSP – GAME	SHIFT+BLUE

