



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BAND LEVEL	-/--
DISPLAY	
VOLUME+	VOL+
VOLUME -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
XM MEMORY	EPG
SRCH. MODE	FAV
SCENE 1	RED
SCENE 2	GREEN
SCENE 3	YELLOW
SCENE 4	BLUE
STANDBY	SHIFT+POWER

ORIGINAL	SUPERIOR
AUDIO SEL.	SHIFT+MUTE
CD	SHIFT+1
DTV / CBL.	SHIFT+2
DVD	SHIFT+3
DVR	SHIFT+4
MD / CDR	SHIFT+5
MULTI CH. IN	SHIFT+6
TUNER	SHIFT+7
V-AUX	SHIFT+8
XM	SHIFT+9
PROG. NEXT	SHIFT+ VOL+
PROG. PREV	SHIFT+ VOL -
XM PRESET NEXT	SHIFT+ P+
XM PRESET PREV	SHIFT+ P -
XM CAT. NEXT	SHIFT+UP
XM CAT. PREV	SHIFT+DOWN
A-E/CAT. PREV	SHIFT+LEFT
A-E/CAT. NEXT	SHIFT+RIGHT
ENT.	SHIFT+OK
ENHANCER	SHIFT+RED
NIGHT	SHIFT+GREEN
STRAIGHT	SHIFT+YELLOW
SUR. DECODE	SHIFT+BLUE

