

ORIGINAL	SUPERIOR
POWER RECEIVER	POWER
MUTE	MUTE
TOP MENU	MENU
POP – UP MENU	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
V – AUX	 / SOURCE
+10	-/--
DISPLAY	
STRAIGHT	
OPTION	
ON SCREEN	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
FM	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
PURE DIRECT	FAV
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
POWER SOURCE	SHIFT+POWER
MULTI	SHIFT+MENU
DOCK	SHIFT+EXIT
HDMI 1	SHIFT+1
HDMI 2	SHIFT+2
HDMI 3	SHIFT+3
HDMI 4	SHIFT+4
HDMI 5	SHIFT+5
AV 1	SHIFT+6
AV 2	SHIFT+7
AV 3	SHIFT+8
AV 4	SHIFT+9
AV 5	SHIFT+0
SUR DECODE	SHIFT+ 
AV 6	SHIFT+ -/--
SCENE BD/DVD	SHIFT+ 
SCENE TV	SHIFT+ 

[illegible]