



ORIGINAL	SUPERIOR
POWER RECEIVER	POWER
MUTE	MUTE
DSP SUR.DECODE	EXIT
V – AUX	 / SOURCE
DSP ENHANCER	-/--
DISPLAY	
DSP MOVIE	
DSP MUSIC	
DSP STRAIGHT	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
FM	TV/DTV
INFO	INFO
TUNER MEMORY	EPG
MODE	FAV
PAUSE	 / SMART TUBE

ORIGINAL	SUPERIOR
STOP	 / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AV 1	SHIFT+1
AV 2	SHIFT+2
AV 3	SHIFT+3
AV 4	SHIFT+4
AV 5	SHIFT+5
HDMI 1	SHIFT+6
HDMI 2	SHIFT+7
HDMI 3	SHIFT+8
HDMI 4	SHIFT+9
USB	SHIFT+ 
SCENE BD/DVD	SHIFT+ 
SCENE RADIO	SHIFT+ 
SETUP	SHIFT+ 
SCENE TV	SHIFT+ 
PRESET+	SHIFT+UP
PRESET -	SHIFT+DOWN
AM	SHIFT+TV/DTV

