



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
HOME	MENU
BLUETOOTH	1
FM / AM	2
NET	3
USB	4
INPUT PREV.	AV
INPUT NEXT	-/--
DISPLAY	
OPTION	
SETUP	
TOP MENU	
VOLUME+	VOL+
VOLUME-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
MEMORY	EPG

ORIGINAL	SUPERIOR
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
POP-UP / MENU	SHIFT+MENU
SCENE – BD/DVD	SHIFT+1
SCENE – NET	SHIFT+2
SCENE – RADIO	SHIFT+3
SCENE – TV	SHIFT+4
BASS	SHIFT+
DIRECT	SHIFT+
ENHANCER	SHIFT+
STRAIGHT	SHIFT+
PROGRAM PREV.	SHIFT+ P-
PROGRAM NEXT	SHIFT+ P+
PRESET PREV.	SHIFT+DOWN
PRESET NEXT	SHIFT+UP
TUNING-	SHIFT+LEFT
TUNING+	SHIFT+RIGHT
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

