



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
HOME	MENU
TOP MENU	EXIT
FM/AM	1
USB	2
NET	3
BLUETOOTH	4
DISPLAY	
STRAIGHT	
SETUP	
ENHANCER	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
BASS	TV/DTV
PUP – UP/MENU	INFO

ORIGINAL	SUPERIOR
OPTION	EPG
DIRECT	FAV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW / TUNING -	GREEN
PLAY / MEMORY	YELLOW
FWD / TUNING+	BLUE
SCENE BD/DVD	SHIFT+
SCENE TV	SHFIT+
SCENE NET	SHFIT+
SCENE RADIO	SHIFT+
PRESET+	SHIFT+ P+
PRESET -	SHIFT+ P -
INPUT+	SHIFT+UP
INPUT -	SHIFT+DOWN
PROGRAM -	SHIFT+LEFT
PROGRAM+	SHIFT+RIGHT
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

