

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
POP-UP / MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	 / SOURCE
BAND	-/--
DISPLAY	
SCENE – BD/DVD	
SCENE – NET	
SCENE – RADIO	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SCENE – TV	TV/DTV
INFO	INFO
MEMORY	EPG

ORIGINAL	SUPERIOR
MODE	FAV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AV 1/2/3/4/5/6	SHIFT+1/2/3/4/5/6
HDMI 1/2/3/4/5	SHIFT+7/8/9/AV/0
V – AUX	SHIFT+ -/--
AUDIO 1	SHIFT+ 
AUDIO 2	SHIFT+ 
NET	SHIFT+ 
TUNER	SHIFT+ 
TUNING+	SHIFT+ VOL+
TUNING -	SHIFT+ VOL -
PROGRAM DOWN	SHIFT+DOWN
PROGRAM UP	SHIFT+UP
PRESET PREV	SHIFT+LEFT
PRESET NEXT	SHIFT+RIGHT
ENT.	SHIFT+OK
ENHANCER	SHIFT+BACK
MOVIE	SHIFT+SLEEP
MUSIC	SHIFT+ TV/DTV
PURE DIRECT	SHIFT+INFO
STRAIGHT	SHIFT+EPG

[illegible]