



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
SETUP	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
+10	-/--
DISPLAY	
OPTION	
VOLUME +/-	VOL +/-
SKIP NEXT/PREV	P +/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
MODE	TV/DTV
INFO	INFO
MEMORY	EPG
PARTY	FAV
PAUSE	
STOP	/ SMART
REW	GREEN

ORIGINAL	SUPERIOR
PLAY	YELLOW
FWD	BLUE
AV 1/2/3/4/5	SHIFT+1/2/3/4/5
HDMI 1/2/3/4/5	SHIFT+6/7/8/9/0
AM	SHIFT+
FM	SHIFT+ -/--
AUDIO 1	SHIFT+
AUDIO 2	SHIFT+
NET	SHIFT+
V – AUX	SHIFT+
PRESET NEXT/PREV	SHIFT+ P +/-
TUNING +/-	SHIFT+ UP/DOWN
PROGRAM -/+	SHIFT+ RIGHT/LEFT
ENT.	SHIFT+OK
ENHANCER	SHIFT+INFO
MOVIE	SHIFT+EPG
MUSIC	SHIFT+FAV
DIRECT	SHIFT+
STRAIGHT	SHIFT+
SUR. DECODE	SHIFT+
SCENE – BD/DVD	SHIFT+RED
SCENE – NET	SHIFT+GREEN
SCENE – RADIO	SHIFT+YELLOW
SCENE – TV	SHIFT+BLUE

