



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
POP-UP / MENU	MENU
ENHANCER	EXIT
HDMI 1/2/3/4/5/6	1/2/3/4/5/6
AV 1/2/3	7/8/9
BLUETOOTH	0
USB	/ AV
FM	-/--
DISPLAY	
NET	
SETUP	
HOME	
VOLUME+/-	VOL+/-
PROGRAM+	P+
PROGRAM-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
BASS	TV/DTV
DIRECT	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
TOP MENU	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
OPTION	SHIFT+MENU
AUDIO 1/2/3	SHIFT+1/2/3
AUX	SHIFT+ / AV
STRAIGHT	SHIFT+ -/--
SCENE TV	SHIFT+
SCENE NET	SHIFT+
SCENE BD/DVD	SHIFT+
SCENE RADIO	SHIFT+
SKIP NEXT/PREV	SHIFT+ P+/-
TUNING >>	SHIFT+UP
<< TUNING	SHIFT+DOWN
< PRESET	SHIFT+LEFT
PRESET >	SHIFT+RIGHT
PARTY	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

