

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
OPTION	MENU
HDMI OUT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DOCK	 / AV
+10	-/--
DISPLAY	
ENTERTAIN	
LEVEL	
CLASSICAL	
VOLUME+	VOL+
VOLUME-	VOL-
TUN. / CH. UP	P+
TUN. / CH. DOWN	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
ON SCREEN	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
LIVE CLUB	FAV
SUR. DECODE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
STEREO	SHIFT+MUTE
ENHANCER	SHIFT+MENU
STRAIGHT	SHIFT+EXIT
AV 1	SHIFT+1
AV 2	SHIFT+2
AV 3	SHIFT+3
AV 4	SHIFT+4
AV 5	SHIFT+5
AV 6	SHIFT+6
AV 7	SHIFT+7
MULTI	SHIFT+8
NET	SHIFT+9
PHONO	SHIFT+0
TUNER	SHIFT+  / AV
USB	SHIFT+ -/--
SCENE 1	SHIFT+ 
SCENE 2	SHIFT+ 

ORIGINAL0	SUPERIOR
SCENE 3	SHIFT.
SCENE 4	SHIFT.
SKIP NEXT	SHIFT+
SKIP PREV.	SHIFT+
AUDIO 1	SHIFT+
AUDIO 4	SHIFT+D
AUDIO 2	SHIFT+L
AUDIO 3	SHIFT+R
ENT.	SHIFT+I
FM	SHIFT+B
AM	SHIFT+SI
V – AUX	SHIFT+
MOVIE	SHIFT+II
PURE DIRECT	SHIFT+E
PARTY	SHIFT+F
PROGRAM DOWN	SHIFT+F
PRESET DOWN	SHIFT+G
PROGRAM UP	SHIFT+YEL
PRESET UP	SHIFT+B

