



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BAND	-/--
DISPLAY	
STRAIGHT	
PURE DIRECT	
NIGHT	
VOLUME+	VOL+
VOLUME -	VOL -
PRESET / CH+	P+
PRESET / CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
ENTERTAIN	TV/DTV
EXTD SURR.	INFO
MOVIE	EPG

ORIGINAL	SUPERIOR
MUSIC	FAV
MEMORY 1	RED
MEMORY 2	GREEN
SPEAKER A	YELLOW
SPEAKER B	BLUE
STANDBY	SHIFT+POWER
AUDIO SEL.	SHIFT+MUTE
CBL / SAT	SHIFT+1
CD	SHIFT+2
CD - R	SHIFT+3
DTV	SHIFT+4
DVD	SHIFT+5
DVR / VCR 2	SHIFT+6
MD / TAPE	SHIFT+7
MULTI CH. IN	SHIFT+8
PHONO	SHIFT+9
V - AUX	SHIFT+0
TUNER	SHIFT+
VCR 1	SHIFT+ -/--
SELECT	SHIFT+
STANDARD	SHIFT+
STEREO	SHIFT+
THX	SHIFT+
TUNER A - E / CAT+	SHIFT+ P+
TUNER A - E / CAT -	SHIFT+ P-

