



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUDIO SEL.	-/--
DISPLAY	
LEVEL	
VOLUME+	VOL+
VOLUME-	VOL-
PRESET/CH +	P+
PRESET/CH -	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SCENE 1	RED
SCENE 2	GREEN
SCENE 3	YELLOW
SCENE 4	BLUE
STANDBY	SHIFT+POWER
CD	SHIFT+1

ORIGINAL	SUPERIOR
DTV / CBL.	SHIFT+2
DVD	SHIFT+3
DVR	SHIFT+4
MD / CDR	SHIFT+5
MULTI-CH. IN	SHIFT+6
PHONO	SHIFT+7
TUNER	SHIFT+8
V-AUX / DOCK	SHIFT+9
VCR	SHIFT+0
XM	SHIFT+AV
ENT.	SHIFT+OK
CLASSICAL	SHIFT+INFO
ENHANCER	SHIFT+EPG
ENTERTAIN	SHIFT+FAV
LIVE / CLUB	SHIFT+ 
MOVIE	SHIFT+ 
NIGHT	SHIFT+ 
PURE DIRECT	SHIFT+RED
STEREO	SHIFT+GREEN
STRAIGHT	SHIFT+YELLOW
SUR. DECODE	SHIFT+BLUE

