

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ENT	-/--
DISPLAY	
SETUP	
VOLUME+	VOL+
VOLUME -	VOL -
TUNING+	P+
TUNING -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
SLEEP	SLEEP
AM	TV/DTV
INFO	INFO
MEMORY	EPG
FM	FAV
SCENE – BD/DVD	RED
SCENE – CD	GREEN

ORIGINAL	SUPERIOR
SCENE – RADIO	YELLOW
SCENE – TV	BLUE
AV 1	SHIFT+1
AV 2	SHIFT+2
AV 3	SHIFT+3
AV 4	SHIFT+4
AV 5	SHIFT+5
AV 6	SHIFT+6
HDMI 1	SHIFT+7
HDMI 2	SHIFT+8
HDMI 3	SHIFT+9
HDMI 4	SHIFT+0
AUDIO 1	SHIFT+ 
AUDIO 2	SHIFT+ -/--
DOCK	SHIFT+ 
TUNER	SHIFT+ 
V – AUX	SHIFT+ 
PRESET NEXT	SHIFT+ VOL+
PRESET PREV	SHIFT+ VOL -
DSP – DIRECT	SHIFT+BACK
DSP – MOVIE	SHIFT+SLEEP
DSP – MUSIC	SHIFT+ TV/DTV
DSP – STEREO/ENHAN.	SHIFT+INFO
DSP – STRAIGHT	SHIFT+EPG
DSP – SUR. DECODE	SHIFT+FAV

[illegible]