



| ORIGINAL         | SUPERIOR         |
|------------------|------------------|
|                  | <b>POWER</b>     |
|                  | <b>MUTE</b>      |
| <b>OPTION</b>    | <b>MENU</b>      |
| <b>V – AUX</b>   | <b>EXIT</b>      |
| <b>1/2/3/4/5</b> | <b>1/2/3/4/5</b> |
| <b>6/7/8/9/0</b> | <b>6/7/8/9/0</b> |
| <b>CD</b>        | / <b>SOURCE</b>  |
| <b>ENT.</b>      | <b>-/--</b>      |
| <b>DISPLAY</b>   |                  |
| <b>STRAIGHT</b>  |                  |
| <b>MUSIC</b>     |                  |
| <b>MOVIE</b>     |                  |
| <b>VOLUME+</b>   | <b>VOL+</b>      |
| <b>VOLUME -</b>  | <b>VOL -</b>     |
| <b>SKIP NEXT</b> | <b>P+</b>        |
| <b>SKIP PREV</b> | <b>P -</b>       |
| <b>UP</b>        | <b>UP</b>        |
| <b>DOWN</b>      | <b>DOWN</b>      |
| <b>LEFT</b>      | <b>LEFT</b>      |
| <b>RIGHT</b>     | <b>RIGHT</b>     |
| <b>ENTER</b>     | <b>OK</b>        |
| <b>RETURN</b>    | <b>BACK</b>      |
| <b>SLEEP</b>     | <b>SLEEP</b>     |
| <b>TV</b>        | <b>TV/DTV</b>    |
| <b>SIRIUS</b>    | <b>INFO</b>      |

| ORIGINAL                  | SUPERIOR             |
|---------------------------|----------------------|
| <b>MEMORY</b>             | <b>EPG</b>           |
| <b>MULTI</b>              | <b>FAV</b>           |
| <b>PAUSE</b>              |                      |
| <b>STOP</b>               | / <b>SMART</b>       |
| <b>REW</b>                | <b>GREEN</b>         |
| <b>PLAY</b>               | <b>YELLOW</b>        |
| <b>FWD</b>                | <b>BLUE</b>          |
| <b>PURE DIRECT</b>        | <b>SHIFT+MUTE</b>    |
| <b>AV 1/2/3</b>           | <b>SHIFT+1/2/3</b>   |
| <b>AV 4/5/6</b>           | <b>SHIFT+4/5/6</b>   |
| <b>HDMI 1/2/3/4</b>       | <b>SHIFT+7/8/9/0</b> |
| <b>BD / DVD</b>           | <b>SHIFT+ </b>       |
| <b>ENHANCER</b>           | <b>SHIFT+ -/--</b>   |
| <b>DOCK</b>               | <b>SHIFT+ </b>       |
| <b>TUNER</b>              | <b>SHIFT+ </b>       |
| <b>AUDIO 1</b>            | <b>SHIFT+ </b>       |
| <b>AUDIO 2</b>            | <b>SHIFT+ </b>       |
| <b>PRESET NEXT</b>        | <b>SHIFT+UP</b>      |
| <b>PRESET PREV</b>        | <b>SHIFT+DOWN</b>    |
| <b>FM / &lt; CATEGORY</b> | <b>SHIFT+LEFT</b>    |
| <b>AM / CATEGORY &gt;</b> | <b>SHIFT+RIGHT</b>   |
| <b>RADIO</b>              | <b>SHIFT+TV/DTV</b>  |
| <b>SUR DECODE</b>         | <b>SHIFT+FAV</b>     |
|                           |                      |
|                           |                      |

