



ORIGINAL	SUPERIOR
POWER RECEIVER	POWER
MUTE	MUTE
AV 1/2/3/4/5	1/2/3/4/5
HDMI 1/2/3/4	6/7/8/9
AUDIO 1/2	AV/0
DOCK	-/--
AM	
FM	
TUNER	
V – AUX	
VOLUME+	VOL+
VOLUME -	VOL -
TUNING+	P+
TUNING -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
INFO	INFO
MEMORY	EPG
OPTION	FAV
SCENE – BD/DVD	RED

ORIGINAL	SUPERIOR
SCENE – CD	GREEN
SCENE – RADIO	YELLOW
SCENE – TV	BLUE
MOVIE	SHIFT+1
MUSIC	SHIFT+2
STEREO / ENHANCER	SHIFT+3
STRAIGHT	SHIFT+4
SUR. DECODE	SHIFT+5
PRESET PREV	SHIFT+
PRESET NEXT	SHIFT+ -/--
SETUP	SHIFT+
iPOD	
MENU	SHIFT+MENU
DOWN	SHIFT+DOWN
UP	SHIFT+UP
LEFT	SHIFT+LEFT
RIGHT	SHIFT+RIGHT
ENTER	SHIFT+OK
SKIP NEXT/PREV	SHIFT+ P +/-
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

