



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
POP – UP/MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HOME	-/--
DISPLAY	
ON SCREEN	
SETUP	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SHUFFLE	TV/DTV
DIMMER	INFO
MEMORY	EPG
TOP MENU	FAV
RED/PROGRAM	RED

ORIGINAL	SUPERIOR
GREEN/MARKER	GREEN
YELLOW/ZOOM	YELLOW
BLUE/DIGEST	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
AUX	SHIFT+1
DISC	SHIFT+2
IPOD	SHIFT+3
PORTABLE	SHIFT+4
STB	SHIFT+5
TUNER	SHIFT+6
TV	SHIFT+7
PIP	SHIFT+
STATUS	SHIFT+
SW+/-	SHIFT+ VOL+/-
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
A – B	SHIFT+FAV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

