



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
HOME	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISPLAY	
OPTION	
VOLUME+	VOL+
VOLUME -	VOL -
FWD/SKIP NEXT	P+
REW/SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
SHUFFLE	TV/DTV
DIMMER	INFO
MEMORY	EPG
OPNE/CLOSE	 / NET TV
STOP	 / SMART
PLAY/PAUSE	YELLOW
AUX	SHIFT+1

[illegible]